
ChangesForYou\_awning drawing.pdf 1



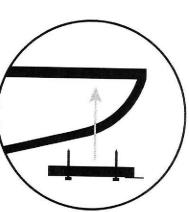

1" X 1" tubing brackets to be bolted to the wall every six feet along the top of the awning using 3/8" X 4" lag bolts and washers. Additional brackets will be used to secure the bottom of the awning

11/24/2014 11:05:46 AM

